
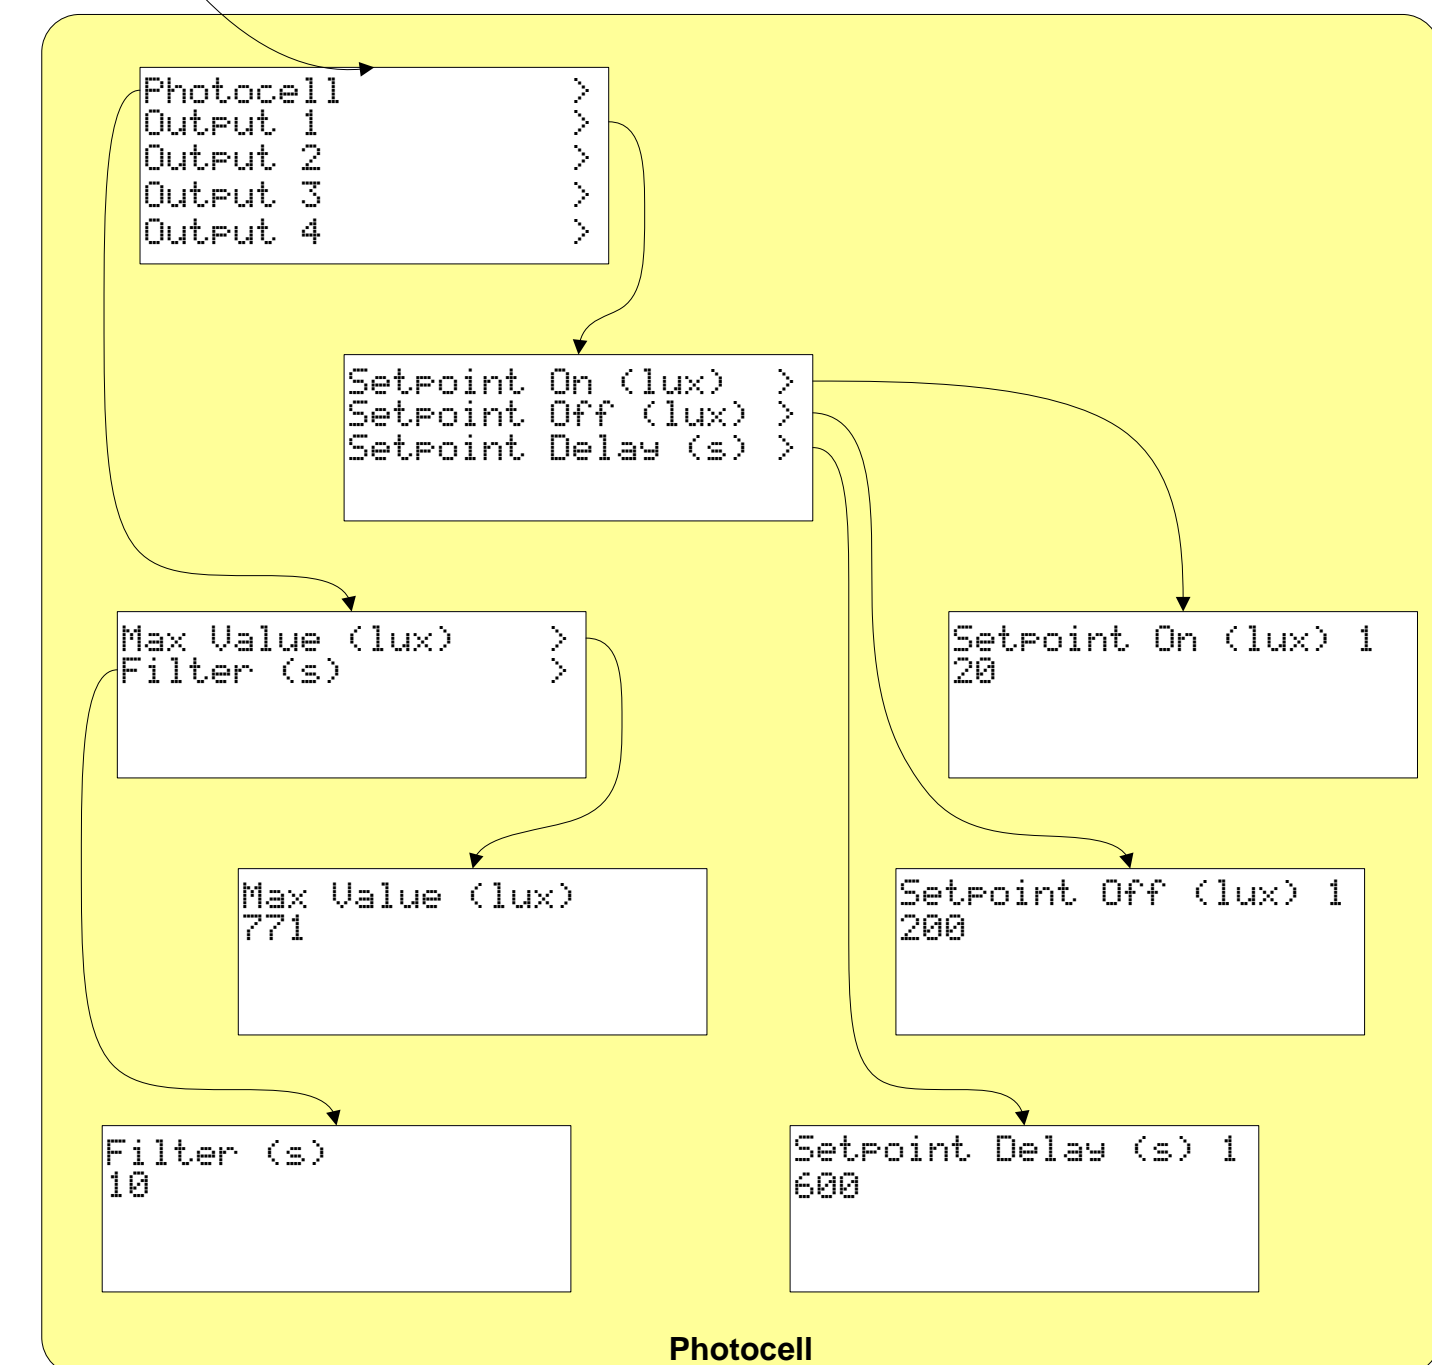
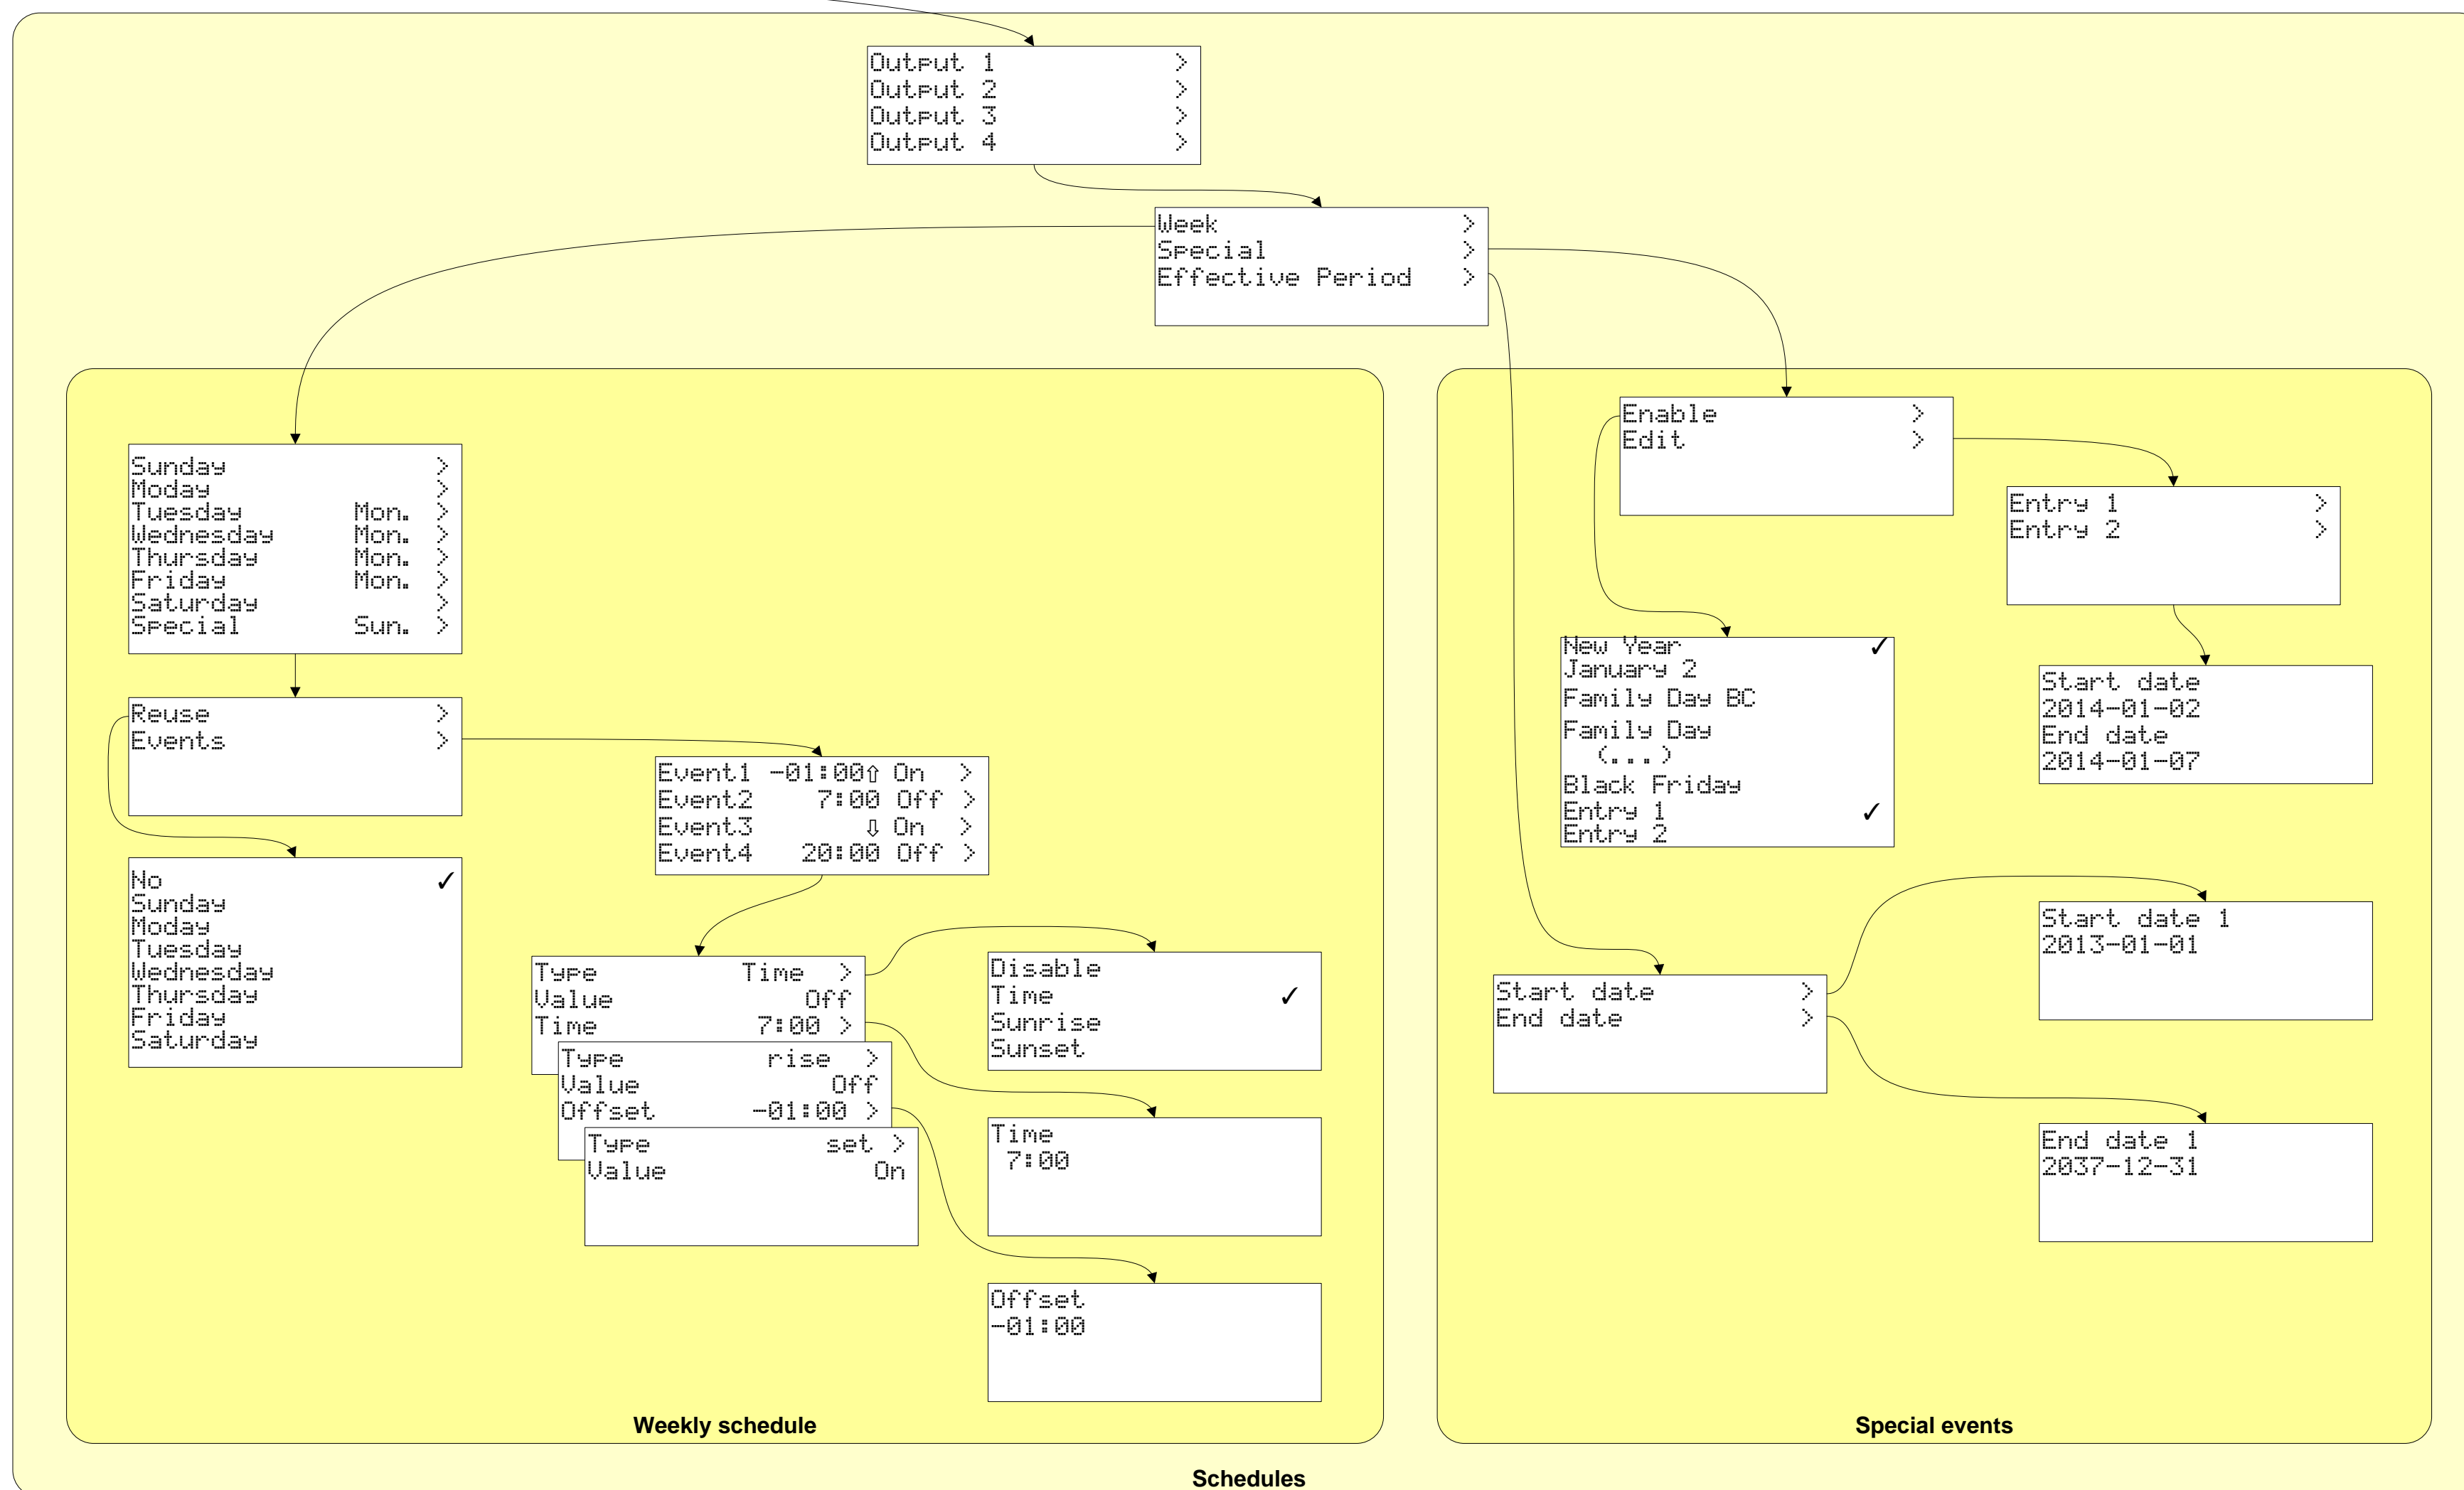
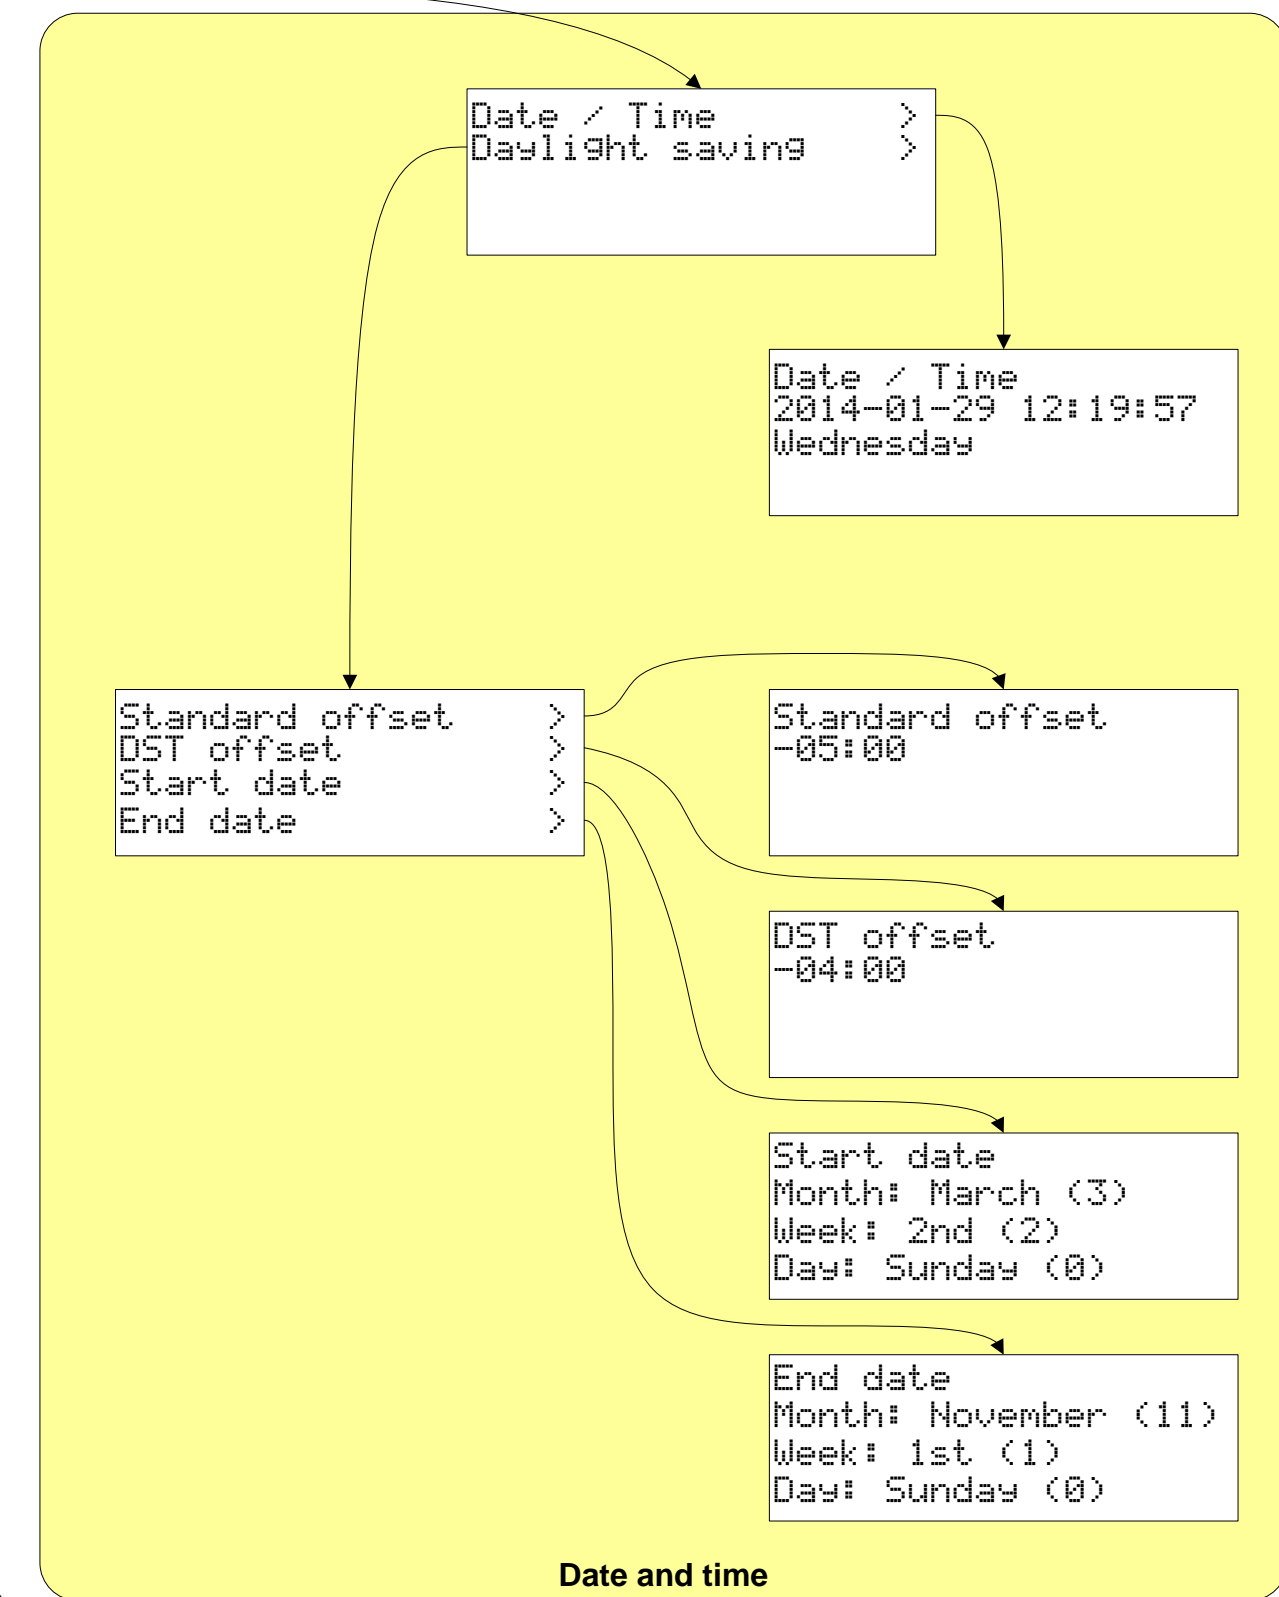
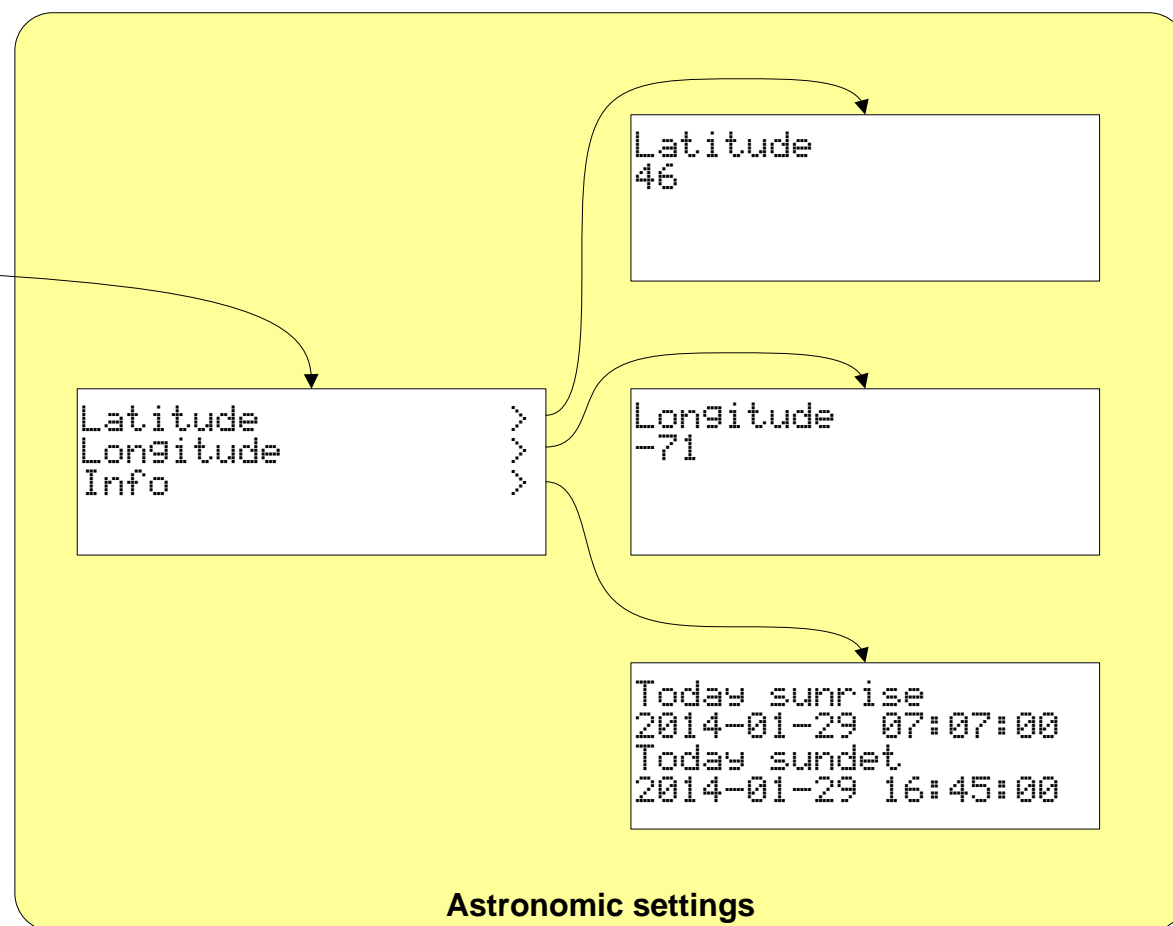


# CCLK-1004 v3.1 – Quick Start

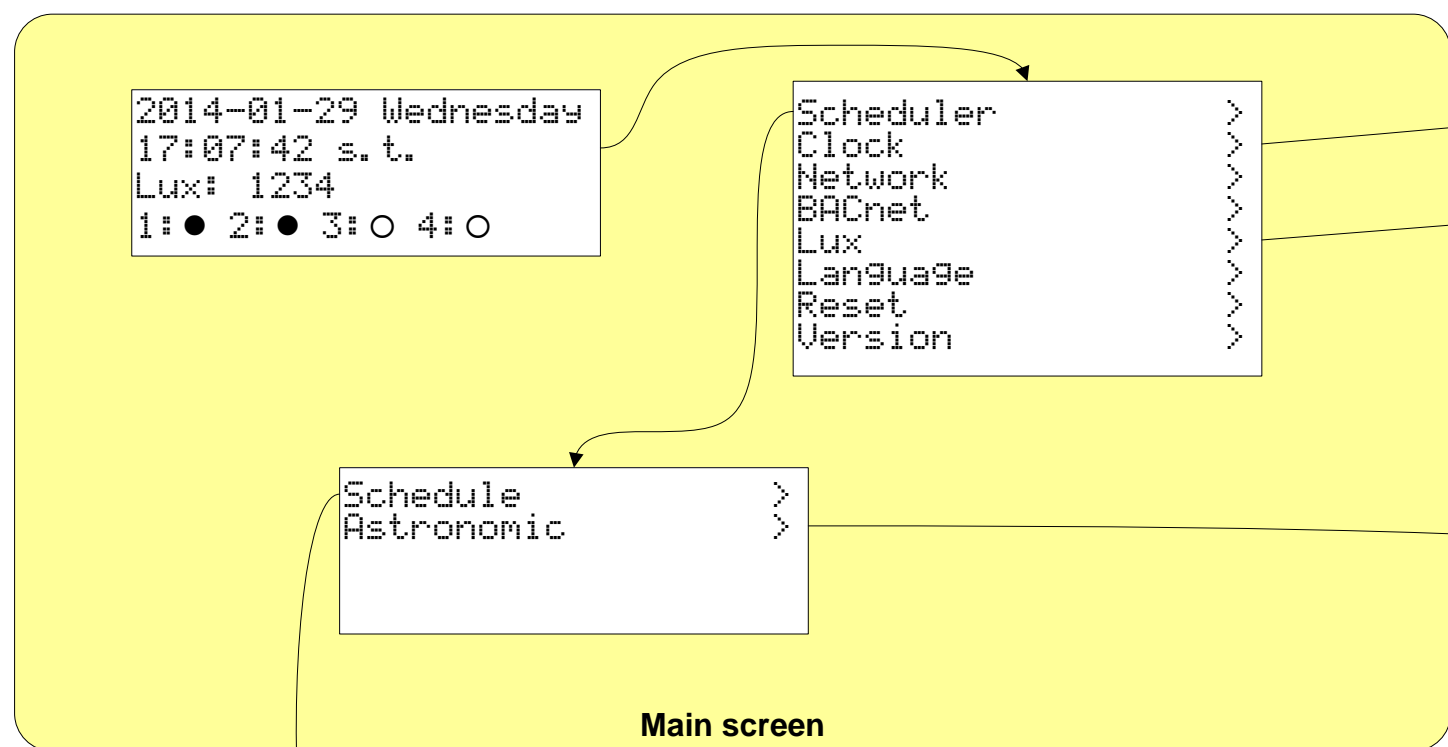

Up / +	Up in the menu selection. Increase display value. Maintain the button to scroll faster.	Right	Enter in the menu.
Down / -	Down in the menu selection. Decrease display value. Maintain the button to scroll faster.	Enter	Confirmation of the new value.
Left	Exit a menu and return to the previous menu.	Clr	Cancel the action being taken.